


Hot water timer instructions...

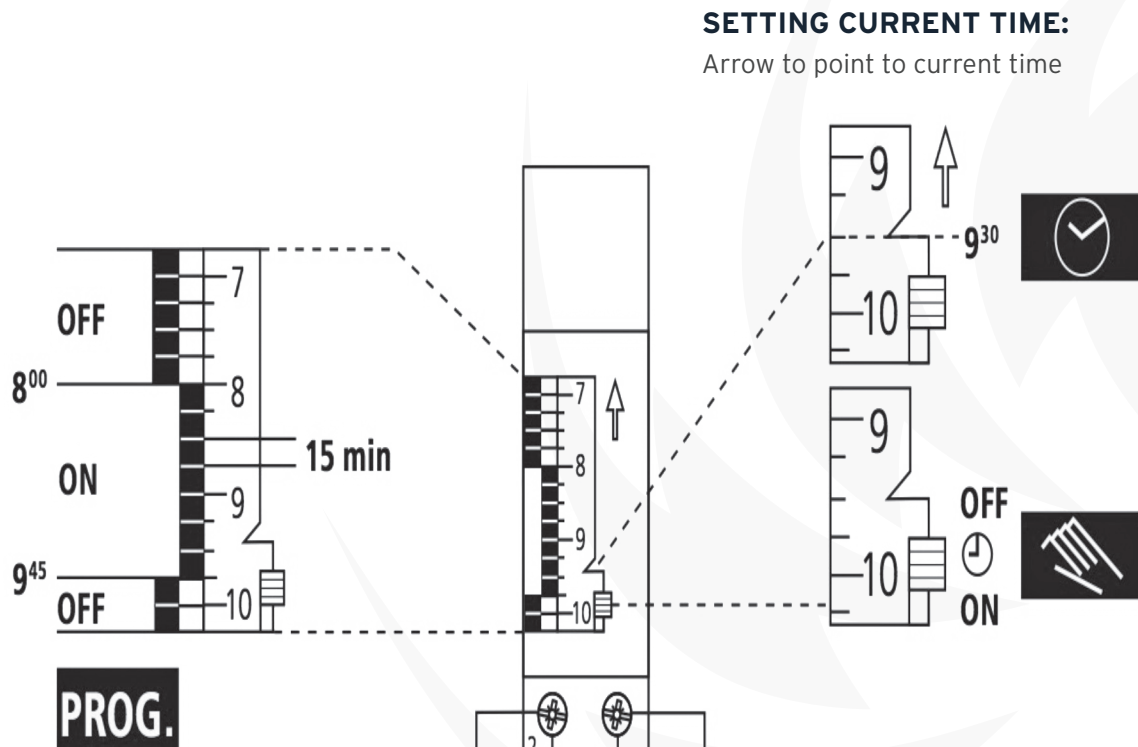

SETTING CURRENT TIME:

Arrow to point to current time

PROGRAMING TIMER:

Pegs pushed to the left turns hot water off,
 Pegs pushed to the right turns hot water on.

OFF: Turns hot water system off

CLOCK: Hot water heats automatically

ON: Bypasses time clock to heat water instantly
 (booster switch)

Timer to be programed to automatically heat water during the day to utilise power being produced by solar system. If more hot water is required timer may be set to turn on in the early morning. Please keep in mind that the solar system is not producing much power early in the morning therefore power will be purchased from the grid to heat hot water.